

SDongleA-03

(4G)



: 11
: 31509550
: 2020-11-27




Copyright © Huawei Technologies Co., Ltd. 2020. All rights reserved.

NOTICE

SDongleA-03 Smart Dongle («Dongle») — Huawei 4G Dongle SmartLogger.

1

RS485

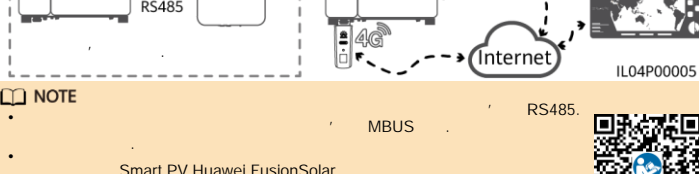

NOTE

Smart PV Huawei FusionSolar. User Manual QR code ILO4P00005

WLAN: SUN2000-2KTL/3KTL/4KTL/5KTL-L0 SUN2000-(3KTL-20KTL)-M series Inverters without a built-in WLAN: SUN2000-50KTL-JPM1 SUN2000-50KTL/63KTL-JPM0 SUN2000-50KTL/60KTL/65KTL-M0 SUN2000-70KTL/75KTL-C1 (optional) SUN2000-70KTL/100KTL-INM0 SUN2000-100KTL-M1 SUN2000-100KTL/110KTL/125KTL-M0 SUN2000-175KTL-H0 SUN2000-185KTL-INH0 SUN2000-185KTL-H1 SUN2000-196KTL-H0	SUN2000-(3KTL-20KTL)-M series SUN2000-29.9KTL/36KTL/42KTL/50KTL SUN2000-33KTL-A SUN2000-33KTL-40KTL-JP SUN2000-43KTL-IN-C1 SUN2000-50KTL/70KTL/75KTL-C1 SUN2000-50KTL/63KTL-JPM0 SUN2000-50KTL-JPM1 SUN2000-50KTL/60KTL/65KTL-M0 SUN2000-70KTL/100KTL-INM0 SUN2000-100KTL-M1 SUN2000-100KTL/110KTL/125KTL-M0 SUN2000-175KTL-H0 SUN2000-185KTL-INH0 SUN2000-185KTL-H1 SUN2000-196KTL-H0
--	---

NOTE

SUN2000-2KTL/3KTL/4KTL/5KTL-L0

Dongle		()
10	$N \leq 9$	$\leq 9 - N$
2	$N \leq 1$	$\leq 1 - N$

NOTE

Dongle, RS485-2, RS485_2 485B2 485A2


2

1. SIM- Smart PV Huawei FusionSolar

NOTE


SIM- (: 25 x 15 : 64). SIM- SIM-

	SIM-	
	10 MB + 4 MB x	Dongle, IV
	3 MB x	
	3 MB x	
PV	2 MB + 0.2 MB x Smart PV	

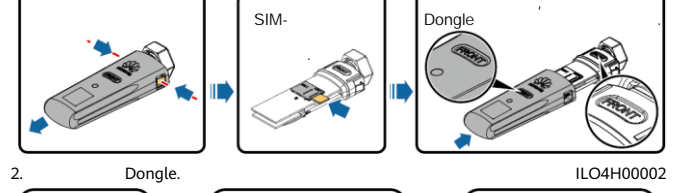

NOTE

3. FusionSolar FusionSolar QR- FusionSolarApp.

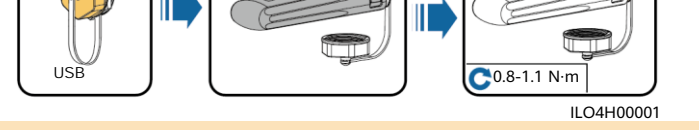

NOTE

SIM- SIM- FusionSolar, QR- FusionSolar « »

N/A			
()			(< 1)
2- (0.1 , 1.9)			1 4G
(1)			(< 30) 30
0.2 (0.2)			Dongle.
(0.2)			Dongle SIM- SIM- SIM- SIM-
(1)			Dongle SIM- SIM-
(1)			Dongle. Dongle Dongle USB Dongle
0.2 (0.2)			Dongle

3

	Plug-and-play ()	SIM-	SIM- (25 x 15)
	LED		3.5 W
(W x H x D)	130 mm x 48 mm x 33 mm		-30°C to +65°C
	90 g		5% RH to 95% RH
	IP65		-40°C to +70°C

SDongleA-03-CN	LTE FDD: B1, B3, B8 LTE TDD: B38, B39, B40, B41 DC-HSPA+/HSPA+/HSPA/UMTS: B1, B5, B8, B9 TD-SCDMA: B34, B39 GSM/GPRS/EDGE: 900 MHz, 1800 MHz
SDongleA-03-EU	LTE FDD: B1, B3, B7, B8, B20 LTE TDD: B38, B40 WCDMA/HSDPA/HSUPA/HSPA+: B1, B8 GSM/GPRS/EDGE: 900 MHz, 1800 MHz
SDongleA-03-AU	LTE FDD: B1, B2, B3, B4, B5, B7, B8, B28 LTE TDD: B40 WCDMA: B1, B2, B5, B8 GSM: 850 MHz, 900 MHz, 1800 MHz, 1900 MHz
SDongleA-03-JP	LTE FDD: B1, B3, B8, B18, B19, B26 LTE TDD: B41 WCDMA: B1, B6, B8, B19
SDongleA-03-KR	LTE FDD: B1, B3, B5, B7 WCDMA: B1

4

NOTE

QR-

